



**Master TR9C**  
**skrócona instrukcja**

**www.klimasklep.pl**  
**kontakt: <https://klimasklep.pl/kontakt>**

## ▶▶ OPERATION

WARNING: In order to use correctly and to avoid hazards, please read, understand and follow

the "SAFETY INFORMATION" before operating the heater.

WARNING: Check the perfect integrity of the power supply cable and that the electrical characteristics

of the network correspond to what is stated on the technical data plate of the heater.

WARNING: Never use the heater without first mounting all the correctly

components. For correct use, install the heater on the wall with suitable fixing plugs.

The wall used for installation must be adequate to support the weight of the heater.

DO NOT USE THE HEATER RESTED ON THE GROUND.

### ▶▶ 1.1. CLOCK SETTING:

IMPORTANT: BEFORE ANY OPERATION, INSERT THE BUFFER BATTERIES ON THE BACK

REMOTE CONTROL (REPLACE LIVE BATTERIES WHEN THEY ARE LOW, IN ORDER TO NOT LOSE THE CLOCK AND DAY SETTINGS).

▶ 1.1.1. Turn on the heater of the main switch (0/1).

▶ 1.1.2. Press the "ON / OFF" button on the remote control.

▶ 1.1.3. Use the "▼ ▲" buttons to select program 03.

▶ 1.1.4. Press the "SET" button.

▶ 1.1.5. Using the "▼ ▲" buttons set the number of the reference day (for example if today is Monday

set day 1, if today is Friday set day 5, etc.).

▶ 1.1.6. Press the "SET" button (the hour starts flashing).

▶ 1.1.7. Use the "▼ ▲" buttons to set the time.

▶ 1.1.8. Press the "SET" button (the minutes start flashing).

▶ 1.1.9. Use the "▼ ▲" buttons to set the minutes.

▶ 1.1.10. Press the "SET" button to confirm (the time and day are correctly set).

▶ 1.1.11. Press the "ON / OFF" button on the remote control.

### ▶▶ 1.2. CHRONOTHERMOSTAT SETTING:

IMPORTANT: MAKE SURE THAT THE TIME AND DAY ARE SET CORRECTLY BEFORE TO START PROGRAMMING THE CHRONOTHERMOSTAT.

NOTE: TO UNLOCK THE KEYBOARD, PRESS THE "▼ ▲" BUTTONS SIMULTANEOUSLY.

▶ 1.2.1. When the heater is on (main switch in position "I"), but with remote control in stand-by

(remote control off), press the "ON / OFF" button.

▶ 1.2.1. With the "▼ ▲" buttons select the program "03" or "04" ["03" (AUTOMATIC PROGRAM

HEATING) or "04" (AUTOMATIC ECO HEATING PROGRAM)].

▶ 1.2.2. Press the "OK" button.

▶ 1.2.3. Press the "OK" button.

▶ 1.2.4. Press the "CLOCK" button for about 6 seconds (1 of the 8 time bands starts flashing that can be set, eg. П0: 01 is time slot 1).

▶ 1.2.5. Using the "▼ ▲" buttons select 1 of the 8 time bands available.

▶ 1.2.6. Press the "CLOCK" button for about 6 seconds.

▶ 1.2.7. With the "▼ ▲" buttons, activate (ON) or deactivate (OFF) the automatic switching on and off

of the heater, with reference to the day (from day 1 to day 7) (press the "CLOCK" button to move between days).

▶ 1.2.8. Press the "OK" button to confirm (the start time starts flashing).

▶ 1.2.9. Use the "▼ ▲" buttons to set the switch-on time.

▶ 1.2.10. Press the "OK" button.

▶ 1.2.11. Using the "▼ ▲" buttons set the ignition minute.

▶ 1.2.12. Press the "OK" button.

▶ 1.2.13. With the "▼ ▲" buttons set the shutdown time.

▶ 1.2.14. Press the "OK" button.

▶ 1.2.15. With the "▼ ▲" buttons set the switch-off minute.

▶ 1.2.16. Press the "OK" button.

▶ 1.2.17. Using the "▼ ▲" buttons set the desired temperature.

▶ 1.2.18. Press the "OK" button to confirm (the program is correctly set).

IMPORTANT: FOR A CORRECT OPERATION OF THE CHRONOTHERMOSTAT PROGRAM,

REMOTE CONTROL MUST BE ON (SO NOT IN STAND-BY, OTHERWISE THE HEATER DOES NOT TURN ON AUTOMATICALLY).

### ▶▶ 1.3. POWER ON:

▶ 1.3.1. After installing the wall heater, connect the heater plug to the mains (Fig. 4) and set the main power switch to "I / ON". The temperature appears on the display environment.

▶ 1.3.2. Turn on the heater with the "ON / OFF" button of the remote control and select with the buttons

"▼ ▲", the desired mode. The following modes are possible:

- PROGRAM 1: Manual program (heating and ventilation) (Fig. 1).
- PROGRAM 2: ECO manual heating program (with operating modulation) (Fig. 2).

- PROGRAM 3: Automatic heating program (chronothermostat) (Fig. 3).
- PROGRAM 4: ECO automatic heating program (with operating modulation) (chronothermostat)

(Fig. 4).

During use, the remote control automatically locks the keyboard. To unlock the control keyboard

remote, press the “▼ ▲” buttons at the same time.

ATTENTION: A SERIES OF SENSORS CHECK THE CORRECT OPERATION OF THE HEATER,

BLOCKING THE APPLIANCE IN THE EVENT OF A SERIOUS FAULT. RESETTING THE HEATER

IT IS NOT AUTOMATIC, BUT MUST BE DONE MANUALLY. WAIT FOR COMPLETE COOLING



**www.klimasklep.pl**  
**kontakt: <https://klimasklep.pl/kontakt>**